

## AC1250





1250kVA / 1000kW POWERED by CUMMINS

# DIESEL GENERATING SET 400/230 V - 50 Hz - 3 Phase

	MODEL		AC1250
Power Pf. 0.8	Standby	kVA	1250
		kW	1000
	Prime	kVA	-
		kW	-

Standby: Continuous running at variable load for duration of an emergency. No overload is permitted on these ratings. In accordance with ISO 3046.

Prime: Continuous running at variable load for unlimited periods with 10% overload available for 1 hour in any 12 hour period. In accordance with ISO 8528,ISO 3046.

- ✓ High quality, reliable and complete power unit
- √ Compact design
- √ Easy start and maintenance possibility
- ✓ Every generating set is subject to a comprehensive test program which includes full load testing, checking and provision of all control and safety shut down functions testing
- ✓ Fully engineered with a wide range of options and accessories: Canopy, sound proof canopy and on-road trailer













## **ENGINE**

CUMMINS						
Model		KTA38G9				
Engine Power Output	kWm	1089				
at rated rpm	HP	1460				
Aspiration and Cooling		Turbocharged & Aftercooled				
Total Displacement	Litre	37.8				
No. of Cylinders and Build		12 V				
Engine Speed	rpm	1500				
Bore and Stroke	mmxmm	159x159				
Compression Ratio		13.9:1				
Governor		Electronic				
Fuel Consumption at standby power	L/hr	256				
Fuel Tank Capacity	Litre	Open: N/A/Canopy:1500				
Oil Capacity	Litre	135				
Coolant Capacity	Litre	279				
Radiator Cooling Air	m³/min	1560				
Air Intake – Engine	m³/min	78.54				
Exhaust Gas Flow	m³/min	212.4				

- √ Heavy duty Cummins diesel engine
- ✓ Four stroke, water cooled, turbocharged & aftercooled
- ✓ Direct injection fuel system
- √ Electronic Governor system
- √ 12/24 V D.C. starter and charge alternator
- ✓ Replaceable fuel filter, oil filter and dry element air filter
- ✓ Cooling radiator and fan
- ✓ Starter battery (with lead acid) including Rack and Cables
- ✓ Flexible fuel connection hoses and manual oil sump drain valve
- $\checkmark$  Industrial capacity exhaust silencer and steel bellows
- ✓ Jacket water heater(at automatic models)
- ✓ Operation manuals and circuit diagram documents

# **ALTERNATOR**

Design	Brushless single bearing, revolving field
Stator	2/3 pitch
Rotor	Single bearing, flexible disc
Insulation System	Class H
Standard Temperature Rise	125 - 163°C Continuous
Exciter Type	Self Excited
Phase Rotation	A (U), B (V), C (W)
Alternator Cooling	Direct drive centrifugal blower fan
AC Waveform Total Harmonic Distortion	No load < 1.5%. Non distorting balanced linear load < 5%
Telephone Influence Factor (TIF)	<50 per NEMA MG1-22.43
Telephone Harmonic Factor (THF)	<2%

- ✓ Brushless, single bearing system, flexible disc, 4 poles
- ✓ Insulation class H
- ✓ Standard degree of protection IP21 (\*IP22/IP23 is available.)
- ✓ Self-exciting and self-regulating

- ✓ Impregnation with tropicalised epoxy varnish
- ✓ Solid state Automatic Voltage Regulator
- ✓ Stator winding with 2/3 pitch for improved harmonics

## **CONTROL SYSTEM**

Control supervision and protection panel is mounted on the genset base frame. The control panel is equipped as follows:

#### 1. Auto Mains Failure Control Panel

Panel equipments:

- ✓ Control with AMF module
- Static battery charger
- ✓ Emergency stop push button

### a) Generating set control module DSE 7320 features:

- The module is used to monitor a mains supply and starts and stops a standby generating set
- Micro-processor based design
- ✓ Automatic control of mains and generator contactors
- ✓ Monitors engine performance and AC power output
- ✓ LED alarm indication
- ✓ Front panel configuration of timers and alarm trip points
- ✓ Easy push button control STOP/RESET - MANUAL -TEST- AUTO - MUTE ALARM - START

### b) Metering via LED display:

- ✓ Generator Volts (L-L / L-N) ✓ Engine oil pressure (PSI-Bar)
- √ Generator Ampere (L1,L2,L3)
- ✓ Engine temperature (° C&° F)
- √ Generator Frequency (Hz)
- ✓ Plant battery volts
- ✓ Engine hours run
- ✓ Mains Volts (Ph-Ph/Ph-N)
- ✓ Generator kVA, kWh
- ✓ Generator kW as % of rated kW setting
- √ Generator Cos (σ)

DSE 7320

#### c) Alarms:

- Over and Under Speed
- Low and High Battery Volt.
- Start and Stop Failure
- Charge fail
- ✓ Over Current
- ✓ Under / Over Generator Voltage
- Low Oil Pressure
- Emergency stop
- High engine temperature
- kW overload
- Unbalanced load
- Independent earth fault trip

#### d) LED indications

Four configurable LED's like:

- Mains available
- Generator available
- Mains on load
- Generator on load

### 2. Power Outlet Terminal Board Mounted on the Genset Base Frame

### **OPTIONAL EQUIPMENTS**

#### **Diesel Engine**

✓ Oil heater

#### **Alternator**

- √ 3/4 Pole Output Circuit Breaker
- ✓ Anti-condensation Heater


#### **Panel**

- Charge ammeter
- Transfer Switch 3 Pole
- √ Transfer Switch 4 Pole
- ✓ Earth Fault ,single set


#### **Accessories**

- ✓ Bulk fuel tank
- ✓ Automatic filling system
- ✓ Fuel-water separator filter
- ✓ Low fuel level alarm
- ✓ Residential silencer
- ✓ Enclosure or sound proof canopy
- ✓ Trailer
- ✓ Manual oil drain pump
- √ Tool kit for maintenance

## **CHASSIS**

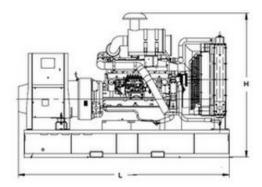


- ✓ The complete gen-set is mounted as whole on a heavy-duty fabricated, steel base frame
- ✓ Anti-vibration pads are fixed between the engine/ alternator feet and the base frame
- ✓ Base frame design incorporates an integral fuel tank (Up to 1000 kVA)
- ✓ The generating set can be lifted or carefully pushed / pulled by the base frame
   ✓ Dial type fuel gauge and drain plug on the fuel tank
- ✓ Forklift pockets within base frame (up to 500kVA)

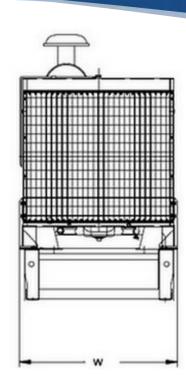


## **DIMENSIONS**

OPEN TYPE							
DIMENSIONS (LxWxH)	mm	4560*1850*2300					
DRY WEIGHT	kg	8600					
SOUND ATTENUATED TYPE							
DIMENSIONS (LxWxH)	mm	7500*2300*2500					
DRY WEIGHT	kg	13500					

# **CANOPY**

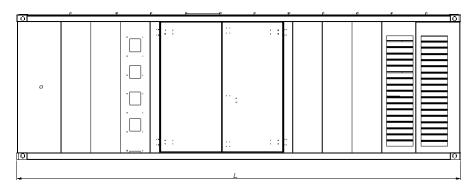

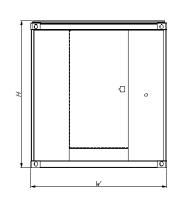

- ✓ All canopy parts are designed with modular principles
- ✓ Without welding assembly
- Doors on each side
- ✓ All metal canopy parts are painted by electrostatic polyester powder paint
- ✓ Exhaust silencer is protected against environment influences
- ✓ Thermally insulated engine exhaust system
- ✓ Emergency stop push button is installed outside of the canopy
- Easy lifting and moving Easy maintenance and operation